

sensio
Spa^s

Nail Spa
Instruction Manual



SSPA04

Sensio Spa



Thank you for purchasing the Nail Spa.


This Nail Spa is an all in one manicure and pedicure set to help you create perfect and healthy nails in your own home.

The Nail Spa is complete with everything you need for shaping, filing, smoothing and polishing your nails. It also includes a bubbling finger spa for softening your cuticles and nails before you manicure and a nail dryer to help you create salon-style nails at home.


It is important that you carefully read the instructions provided, in order to get maximum use from this product.



Key Features

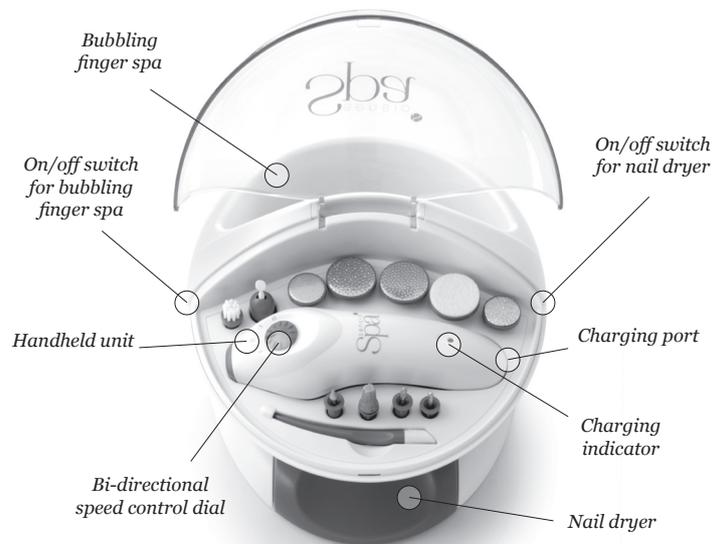

Key Features

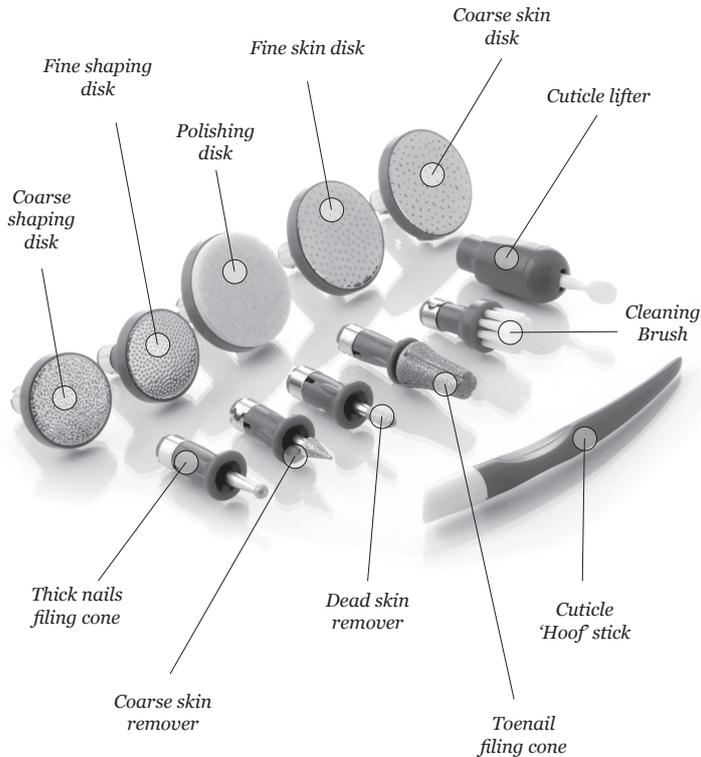

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

Directions For Use How To Charge

- Before first use, charge the handheld unit for 24 hours to ensure the batteries are activated and fully charged.
- The normal charging time after first use is 7 hours.
- The storage unit also serves as a charging station. Turn the switch to the "0" setting to switch off and place the handheld unit within the storage unit. Connect the charger to the charging port on the side of the storage unit. Plug the supplied charging adaptor into a suitable mains socket.
- Before switching it on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. Connecting it to any other power source may cause damage.
- The charging indicator will turn red after a few seconds to show charging is under way. Unplug charging adaptor before use.
- It is recommended to switch off the appliance for 15 minutes after each 20 minute period of constant use.

Using Directly with the Charging Adaptor

- The manicure set can be used with the charging adaptor in case the batteries are empty. Only use the charging adaptor supplied with this product to avoid an electrical hazard. If damaged, it must only be replaced with the original type.
- Connect the charger to the charging socket at the end of the handheld unit. Plug the charging adaptor to the mains socket.
- If batteries are completely empty, recharge the unit for 5 minutes before use.

How To Use The Bubbling Finger Spa

- Before starting your manicure, soak your fingers in the bubbling finger spa for 2 minutes to massage your fingers and soften your cuticles and nails.
- Plug in the charging adaptor into the mains socket.
- Put lukewarm water into the bubbling finger spa. Do not fill beyond the 'MAX' line. Do not add anything such as oils to the finger spa as it may block the bubble holes.
- Press the "Bubbling Spa" on/off switch to activate the bubble massage.
- Use a clean, dry cloth to dry the hand immediately after lifting your hand out.

- Before pouring the water out, unplug the adaptor and place it away from the manicure set. Ensure the lid to the nail bar is closed. Always pour water out from the inside of the tank to prevent water splashing onto the manicure set.
- Always keep the adaptor WELL AWAY from the bubbling finger spa.
- Dry the bubbling finger spa after each use.

Using the Manicure and Pedicure Attachments

To connect the attachments to the handheld unit, simply push your desired attachment into the handheld unit making sure that it has clicked into place.

The handheld unit features a bi-directional rotation with 2 speed settings. Simply turn the switch to select the desired rotation direction and speed for your manicure or pedicure. Turn to the "1" setting for low speed and the "2" setting for high speed.

- **Cleaning brush:** To clean nails at the end of your filing session. The brush can also be used to clean away any cuticle residue and prepare the nail for buffing.
- **Cuticle lifter:** Gently apply the cuticle lifter, be careful not to allow the tip deep under the skin. Start on one side of the nail and work across to the other side of the nail, then back again.
- **Coarse & fine shaping disks:** To file and sculpt nails. For soft or fine nails, use the fine shaping disk (round dots). For thicker, stronger nails use the coarse disk (jagged edges), and finish by using the fine shaping disk.
- **Polishing disk:** Use to lightly polish nails at the end of the manicure or pedicure treatment. The disk can be used to smooth out the filed nails and add shine.
- **Thick nails filing cone:** To file and treat the surface of thick toenails and fingernails. This attachment can be used together with toenail filing cone.
- **Coarse & fine skin disk:** To remove dead skin from hands and feet. For rough skin, use the rough disk (jagged edges). For smoother skin, use the coarse disk (round dots). Lightly apply the disk to rough areas on the soles, at the heels and even on the hands. Move the manicure tool in a back and forth motion to gently exfoliate the skin surface.
- **Coarse skin remover:** To smooth calluses, corns and coarse skin. Gently apply the filing cone to the skin, moving in a back and forth motion while covering the rough skin areas.
- **Dead skin remover:** To remove dead skin and treat ingrown nails. Move the unit from the outside towards the inside of the nail bed.
- **Toenail filing cone:** To file and treat the surface of thick toenails.

- **Hoof Stick:** Use to push back cuticles manually. It can be carried in a purse for quick touch-ups while on the go.

Cleaning and Maintenance

- The charging adaptor provided with this appliance has been especially designed for the Nail Spa. If damaged, it must be replaced with exactly the same rating and type to avoid an electrical hazard.
- Avoid dropping the appliance to prevent internal parts from being damaged.
- Always unplug the adaptor before cleaning the unit.
- Always prepare a clean, dry cloth, in advance for drying your hands before using the bubble spa.
- Never use liquids or abrasive cleaners to clean the unit. Wipe the appliance with a clean, dry cloth. Never immerse the appliance in water.
- The attachments can be cleaned from time to time with rubbing alcohol.
- Clean the bubbling spa tank after each use.
- DO NOT carry the appliance by its power cord, use the cord as a handle, or wrap the power cord around the appliance.
- After cleaning, store in a dry place.

Servicing

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician.

Important Cautions and Warnings

Please read all the instructions before use and pay particular attention to any warnings.

- Before connecting the appliance to the mains socket, make sure the voltage on the adapter's rating plate corresponds to the local voltage. Always unplug this appliance immediately after use.
- This appliance is designed exclusively for domestic use. Only use this appliance for its intended use as described in this manual and only use attachments included in this pack.

- **ALWAYS** keep the unit out of the reach of young children. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliances are **NOT** waterproof and **CANNOT** be used in the shower. Never immerse into water or any other liquids during use and/or cleaning.
- **DO NOT** reach for the appliance if it falls into water. Unplug immediately.
- **DO NOT** use under a blanket or a pillow to avoid overheating.
- **DO NOT** use the appliance, accessories or the adaptor if it is damaged or broken to avoid injuries. Keep the appliance and mains cord away from hot or heated surfaces.
- **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

Keep these instructions safe for future reference.

Important Safeguards

- DO NOT use if there are open wounds, swellings, burns, peeling skin or sensitive areas on fingers or toes.
- Consult a Doctor before using this appliance if you have diabetes or vascular problems.
- If you feel any discomfort whilst using this appliance, discontinue use and immediately consult your Doctor.

Warranty

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.sensiospa.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss. In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement. If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code. This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1133).

For spare parts please contact Customer Services quoting the product's model number and batch code. They will give you up-to-date prices.

Warranty Exclusions

1. Batteries and damage from leakage is not covered by the terms of the guarantee.
2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
3. Consumable items such as brushes and files are not covered under this warranty.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact

MPL Home Ltd - IMEX, 575-599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX

Model: **SSPA04**

Customer Helpline: **0345 467 6743**

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.



sensio
Spa



sensio
Spa

www.sensiospa.com